



OKMO Friction Clutch Pulley P51


Disengage the clutch (no power output)

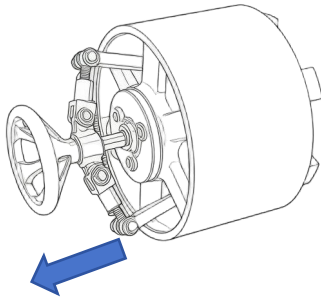


The clutch engages to transmit power.

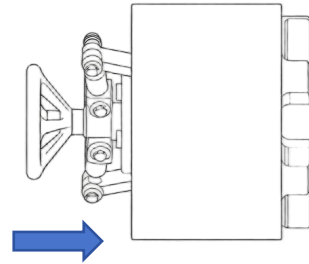


Unscrew the pulley screws one by one. Remove the pulley.

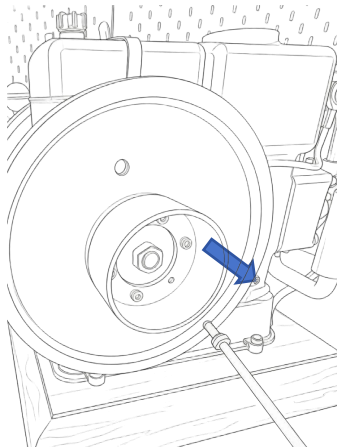


Install the clutch and align the screw holes.

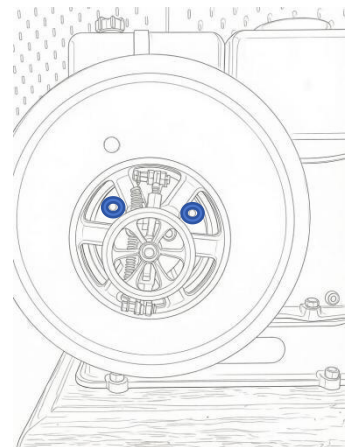

With the clutch disengaged, rotate the pulley left and right to find the correct position, then tighten the screw.

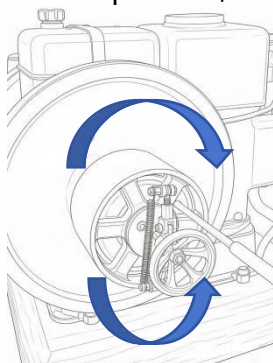

Assembly complete

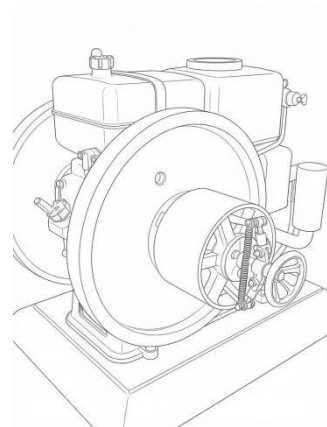

OKMO