



HMC-K158TWS









Sincerely thank you for purchasing this products. Before using, please read through the manual, to ensure that you use the product correctly.

Accessories

Earphones × 1 Pair Alternative Ear Tips(XS, S, M) × 3 Pair

(M size one are in Earphones)

Charging Box × 1 Set

Charing Cable x 1 Set

User Manual and Guarantee × 1 Set

Warranty Period: 1 Year 保证期间: 1年



Specification

Bluetooth Spec.

| Communication system | 通信系统 | 通信方式 | Bluetooth version 5.0 | |
|----------------------------|----------|----------|---|--|
| RF power output | 射频功率输出 | 出力 | Bluetooth class 2 Line of sight-approx. 10m | |
| Max communication distance | 最远通信距离 | 最大通信距離 | | |
| Frequency band | 频带 | 使用周波数帯域 | 2.4GHz (2.402GHz - 2.480GHz) | |
| Support profile | 对应配件文件 | 対応プロファイル | A2DP, AVRCP, HFP, HSP,SPP | |
| Support codec | 支持编解码器 | 対応コーデック | SBC, AAC | |
| Multi point | 多点配对 | マルチポイント | 2 units | |
| Multi pairing | 多个配对 | マルチペアリング | 10 units | |
| Max last play time | 最大链接播放时间 | 最大連続再生時間 | About 2 hours | |
| Max phone call time | 最大链接通话时间 | 最大連続通話時間 | About 4 hours | |
| Max stand by time | 最大链接待机时间 | 最大連続待受時間 | About 80 hours | |
| If charging time | 充电时间 | 充電時間 | About 2 hours | |

Earphone / Case Spec.

 
| Type | 类型 | 型式 | Dynamic type |
|----------------------------|---------|------------|----------------------------------|
| Magnet | 磁铁 | マグネット | High magnetic force |
| Driver unit | 驱动单元 | ドライバーユニット | Ф6mm driver unit |
| Frequency response | 频率响应 | 再生周波数帯域 | 20Hz ~ 20,000Hz |
| Inpedance | 阻抗 | インピーダンス | 16Ω |
| Max input power | 最大入力 | 最大入力 | 10mW |
| Sensitivity | 灵敏度 | 音圧感度 | 112dB / 1KHz |
| Earphone battery capacity | 耳机电池容量 | イヤホンバッテリー | 50mAh Lithium ion battery |
| Chargebox battery capacity | 充电盒电池容量 | 充電ケースバッテリー | 380mAh Lithium ion battery |
| Charging connector | 充电接口 | 充電端子 (ケース) | microUSB terminal |
| Attached charging cable | 附属充电线 | 付属充電用ケーブル | microUSB ≒ USB A |
| Attached eartips | 附属耳套 | 付属イヤーキャップ | XS·S·M size **M size set already |

ブルートゥースの仕様に関して、再生時間や通話時間は使用する環境(音量の大きさ等)によって変わります。 また、充電時間も充電方法によって変わります。

Charge the Case and Earphones

Charge

Earphones If the earphone battery power is running low, the product will play a confirmation tone through the earphone "Low Battery, Please Charge." for many time. Please place the earphones into the case.



Charging Case Charge (Cable Charge & Wireless Charge)

When the charging case battery power is under 25%, please use included charging cable or wireless charger to recharge.

* The Check of Battery Power

Place the earphones into the case, and close the covers. When you reopen the cover again. The lamps will show the current battery power.

75% (Green) 50% (Green) 25% (Red) Place the case on the wireless charge can be charged. Wireless Charger are not included. Please

Indicator lamps

100% (Green)

Connect to Connect to USB Adapter & Port **Charging Case**

Connect and Pair via Bluetooth

When connecting a new Bluetooth devices, you need to pair it with the product. Once the Bluetooth device and the product are paired. You do not need to pair them again. The product will connect the devices automaticaaly when you open the charging case cover. To ensure connecting successfully, please make sure switch on Bluetooth on your device.

① Insert the product into the ear correctly.





② Pairing between L and R Earphones

When power turn off, Long press the buttom and power will turn on with confirmation tone "Power on" . Then earphones will connect to each other with tone "Connecting, Left Channel, Right Channel." When they finish, the confirmation tone "Pairing" announce.

- * Do not remove finger from the sensor untill the confirmation tone "Power on" anounce.
- * The confirmation tone "Left Channel" "Right Channel" will announce from left earphone and right earphone seperately.
- The confirmation tone "Pairing" will announce from left earphone.

Indicator Lamps In Charging Status: The lamps light in red. of earphones:

In Standby Status: The "L" earphones indicator lamp flashes in green quickly, while "R" earphone indicator lamp flashes in green slowly.

- * Long touch the sensor area will turn on/off the power with confirmation tone "Power on / Power off" . Earphones power will turn off automatically when charging.
- * Please turn off the power when you do not use.

③ The First Time Pair with Bluetooth Devices

Before pairing, please turn on Bluetooth function on your devices. And search for the product. When you Bluetooth device finds the product, "KX-158TW" will be displayed on the devices. Select "KX-158TW" to pair the product and your Bluetooth device. Confirmation tone "Pairing successfully connected"


After pairing successfully, Earphones indicator lamps flashes in blue slowly

Automatically Pair (Since the Second Time)

Turn on Bluetooth function on your devices. Open the cover and earphones power turns on automatically. Then they will connect with each other and reconnect to your Bluetooth device. Remove the earphones from the charging case and enjoy using.

*If the product fail to reconnect, please delete the pair record on your device, and follow step 2-3 again.

disconnect with Bluetooth device.

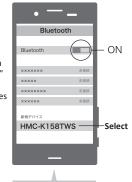

Please read the user

manual for the

purchase it in other ways

If you get in trouble on the first time pair. And KX-158tw are not found on your device. Please turn off and on Bluetooth function on your device again and search. If KX-158tw are found on your device, please delete the record and pair again. The earphones will play confirmation tone "Disconnected" when earphones

Listening to Music

Please connect and pair with your Bluetooth device first.

Use your Bluetooth device to start playback, referring to the device manual as necessary.

When music playing

· · · · · · Pause Press once either Left or Right

When music playing

Press twice either Left or Right · · · Play the next track-

When music playing

Press trible either Left or Right · Play the previous track-

This function will be influenced by some APPs and play current song again. In this case, you can touch twice again after this operation.

When music pause

Press once either left or right





- Selecting music, artist with the products are not available.
- ※ Touch twice left earphone may replay the current song due to different APPs.
- % Some control of devices may not available for music, video playback on some devices.


· · · · Plav -

Multi-Pairing Function

The prodcut have multi-pairing function that can record 10 devices which pair before.

Please follow "Connect and Pair via Bluetooth" to pair with a new device. When switching to a new Bluetooth device, you may not be able to pair because the previously connected Bluetooth device cannot be able to disconnected. Please ensure disconnection status before pairing.

The product can record 10 devices. When the product need to record the the eleventh device, it will forget the first record automatically.

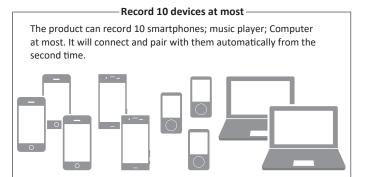

Bluetooth Troubleshooting

Problems about Pairing, no sound and the soluction.

Obstacles between product and the Bluetooth device, such as people, metal, walls and place the product and device closer together.

Place the product and the Bluetooth device within 10m of each other.

The product may be unable to pair if Bluetooth device connect to the product and Wi-Fi in the same time.

Turn off Wi-Fi and pair the product with the Bluetooth device again.

The product is unable to connect or control due to APPs and other products

has connected your Bluetooth devices

Turn off the APPs and make sure your Bluetooth device has not connected with other product.

Please follow these solutions as follow

Delate the record on your Bluetooth devices, and follow step "Connect and Pair via Bluetooth" to pair again

Turn off the product and Bluetooth device power and pair agian.

Recharge the product with charging case.

The product are not promised to pair with all the Bluetooth device.

If any par error affects Bluetooth device, KONG-X disclams responsibility.

To improve the apparences and packages, KONG-X has right to update without noticification. To ensure the quliaty, we will replace the defective products with new ones for manufacturing



Lucky Sound Technology Co.,Ltd

Room 313, Building No.1, Yifang Industrial Park (138 Park), Hongye North No.1Road, Tangxia, Dongguan, Guangdong, China. TEL: 0769-8225 2556 Emai: info@kingkong88.com Website: www.kong-x.com

Made in China with Japanese design

Talking on the phone

Phone call controls explained as follow may not be available on some smartphones.


| · Press when receiving a call | | Answer— | |
|-------------------------------|--|---------|-----------------------|
| · Press when talking | | End — | |
| . Press and hold for 3 second | | Reject | |
| | | | Control are avialable |

The volume control of devices when talking are not available with the products

Replacing the Eartips

The product includes silicone eartips in 3 sizes (XS, S, M). At the time of purchase, the M-size silicone eartips are attached.

 ※ To ensure the best sound quality, select the eartips that is best for you, and adjust the eartips inside your ears for a snug fit. Inappropriate eartips will lead you be difficult to hear bass sounds.



Safety Precautions

To ensure safety, observe all warnings and cautions while using the product.

| •• | · · | | |
|---|--|--|---------------------|
| ○ Caution | ① Caution | Warrning | |
| Do not get wet Avoid to electric leakage, crack, fire. | Do not allow Avoid to battery power. | product being exposed to the substitute of filling leakage, crack and fire, especial | unligh lly in lo |
| | | | |

Do not touch fluid with bare hands

If fluid gets in your eyes, wash your eyes immediately. If your skin in contact with fluid, immediately wash the affected skin with water. If you experience eyes or skin irritation, consult doctor.

Charge only with the included USB Cable. When charging, make sure to use the included USB charging cable to avoid malfunction or fire.

Do not use the product if it is abnormal. Do not use the product from a device if the product begins to malfunction, producing smoke,

odor, heat, unwanted noise or showing other signs of damage. Do not disassemble, modify.
Do not disassemble, modify or attempt to repair the products to avoid electric shook, malfunction or fire.

Do not allow the product to get wet \Diamond Do not allow the product to get wet to avoid electric shock or malfunction

Do not use the product if you are cycling or driving. Do not use the product to avoid the accidents when you are cycling or driving

Do not use the products in loud volume in places where need to caution. The product effectively shields external sound, so you may not ambient sound around you while hearing the product. Adjust the volume to a level where you can still hear

background sound. Discontinue use if skin irritation or feel sick. If you begin to feel sick or skin irritation, please discontinue use immediately.

Do not use the product in place where has magnetic equipment. Radio waves may affect cardiac pacemakers and medical electronic equipment.

HMC-K158 Guarantee

This guarantee provides for free repair in accordance with the contents and items that have recorded. It is invalid if the necessary contents and items are out of this manual,

so please read twice and keep a complete record in case of repairing

1. If the product works abnormally under the manual guide. You can apply for after service to us or the store you buy it.

2. If the products are in the guarantee period, please contact the store or us for free repair.

We will charge for repair in the condition as follow, even in the warranty period

(1) The misuse and malfunction of the products and the damage caused by repair in private.

(2) The malfunction caused by disaster like fire disasters, earthquake, thunder etc. (3) The malfunction and damage caused abnormally used. (Vocational use for a long time)

(4) This guarantee hasn't recorded the date of purchase, customer name, sales name, or the guarantee contents are obliterated.

*This guarantee will not be issued again, please keep it properly.
*The product is not promised to keep data which stored in your devices if there any damage occur. We disclam all responsibility for the loss or damage of the data in this situation.

| Guarantee Period | 1 Year from Purchase Date(Y/M/D): |
|---------------------|-----------------------------------|
| | Name |
| Customer | Address |
| | TEL: |
| Sales Store | |

Earnestly Promise

Your information in this guarantee will be only used for the repair. We will keep it confidential. We will not share to the third party without your agreement.