



# TRUE WIRELESS STEREO

Bluetooth Ver.5.0  
Wireless system  
Earphones

KX-188TW

- BLUETOOTH VERSION 5.0
- AUTO PAIRING
- TOUCH SENSOR
- 4H MAX LAST PLAY TIME
- 380mAh BATTERY CASE



Compatible with Wireless Charging

Sincerely thank you for purchasing this products. Before using, please read through the manual, to ensure that you use the product correctly.

## Accessories

- Earphones × 1 Pair
- Alternative Ear Tips(XS, S, M) × 3 Pair (M size one are in Earphones)
- Charging Box × 1 Set
- Charing Cable × 1 Set
- User Manual and Guarantee × 1 Set

Warranty Period : 1 Year

保証期間 : 1年

保証期間 : 1年

## Specification

### Bluetooth Spec.

 
Communication system	通信システム	通信方式	Bluetooth version 5.0
RF power output	射頻功率輸出	出力	Bluetooth class 2
Max communication distance	最遠通信距離	最大通信距離	Line of sight-approx. 10m
Frequency band	頻帯	使用周波数帯域	2.4GHz (2.402GHz - 2.480GHz)
Support profile	対応配件文件	対応プロファイル	A2DP, AVRCP, HFP, HSP
Support codec	支持編解碼器	対応コーデック	SBC, AAC
Multi pairing	多个配对	マルチペアリング	10 units
Max last play time	最大链接播放时间	最大連続再生時間	About 4 hours
Max phone call time	最大链接通话时间	最大連続通話時間	About 4 hours
Max standby time	最大链接待机时间	最大連続待受時間	About 30 days
If charging time	充电时间	充電時間	About 1.5 hours

### Earphone / Case Spec.

Type	类型	型式	Dynamic type
Magnet	磁铁	マグネット	High magnetic force
Driver unit	驱动单元	ドライバーユニット	Φ6mm driver unit
Frequency response	频率响应	再生周波数帯域	20Hz ~ 20,000Hz
Impedance	阻抗	インピーダンス	16Ω
Max input power	最大入力	最大入力	10mW
Sensitivity	灵敏度	音圧感度	112dB / 1KHz
Earphone battery capacity	耳机电池容量	イヤホンバッテリー	50mAh Lithium ion battery
Chargebox battery capacity	充电盒电池容量	充電ケースバッテリー	380mAh Lithium ion battery
Charging connector	充电接口	充電端子 (ケース)	microUSB terminal
Attached charging cable	附属充电线	付属充電用ケーブル	microUSB ⇄ USB A
Attached eartips	附属耳套	付属イヤークャップ	XS・S・M size ※M size set already

\* Earphones play times will be influenced by actual operation (Volumes up).


## Part Name

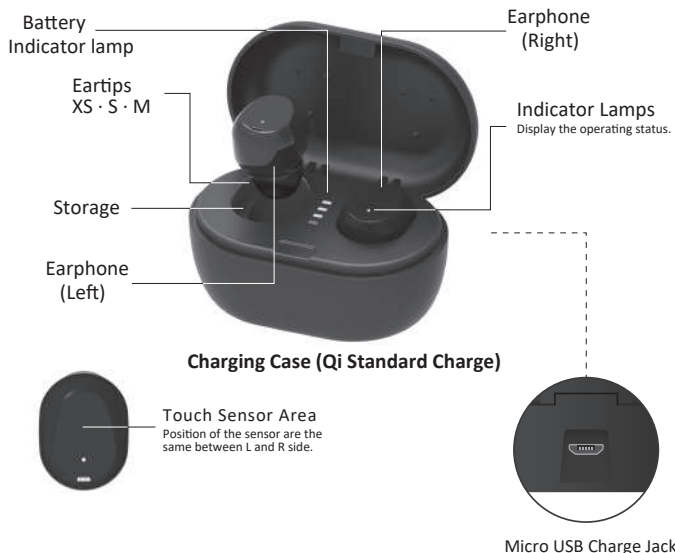

## Charge the Case and Earphones

### Earphones Charge

 If the earphones battery power is running low, the product will play a confirmation tone through the earphones "Low Battery Please Charge." for many time. Please place the earphones into the case.

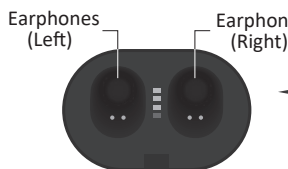

\*After place the earphones into the case, it will recharge automatically in a few seconds. Please make sure that the cover is closed.  
\*It will take 2 hours to charge up the earphones. (during the charging, Please place the charging case flat.)

### Charging Case Charge (Cable Charge & Wireless Charge)

→ When the charging case battery power is under 25%, please use included charging cable or wireless charger to recharge.

- Indicator lamps**
- 100% (Green)
  - 75% (Green)
  - 50% (Green)
  - 25% (Red)

#### ※ The Check of Battery Power

Place the earphones into the case, and close the covers. When you reopen the cover again. The lamps will show the current battery power.

- The Indicator lamps will flash sequentially when charging.
- After charge is finished, all the indicator lamps will on.



Place the case on the wireless charger can be charged.

※ Wireless Charger are not included. Please purchase it in other ways if you need.

## Connect and Pair via Bluetooth

When connecting a new Bluetooth devices, you need to pair it with the product. Once the Bluetooth device and the product are paired. You do not need to pair them again. The product will connect the devices automatically when you open the charging case cover. To ensure connecting successfully, please make sure switch on Bluetooth on your device.

### ① Insert the product into the ear correctly.

Multi-Function Button (Touch Sensor)



Position of "L" "R" Mark



Correctly Wearing

### ② Pairing between L and R Earphones

When power turn off, Long touch the sensor area and power will turn on with confirmation tone "Power on" . Then earphones will connect to each other with tone "Connecting, Left Channel, Right Channel." When they finish, the confirmation tone "Pairing" announce.

- ※ Do not remove finger from the sensor until the confirmation tone "Power on" announce.
- ※ The confirmation tone "Left Channel" "Right Channel" will announce from left earphone and right earphone separately.
- ※ The confirmation tone "Pairing" will announce from left earphone.

**Indicator Lamps of earphones :** In Charging Status: The lamps light in red.  
In Standby Status: The "L" earphones indicator lamp flashes in blue quickly, while "R" earphone indicator lamp flashes in blue slowly.

- ※ The product automatically turns off after 10 minutes of not being connected to a device.
- ※ Long touch the sensor area will turn on/off the power with confirmation tone "Power on / Power off" . Earphones power will turn off automatically when charging.
- ※ Please turn off the power when you do not use.

### ③ The First Time Pair with Bluetooth Devices

Before pairing, please turn on Bluetooth function on your devices. And search for the product. When you Bluetooth device finds the product, "KX-188TW" will be displayed on the devices. Select "KX-188TW" to pair the product and your Bluetooth device. Confirmation tone "Pairing successfully connected" will play.  
After pairing successfully, Earphones indicator lamps flashes in blue slowly.

### ④ Automatically Pair (Since the Second Time)

Turn on Bluetooth function on your devices. Open the cover and earphones power turns on automatically. Then they will connect with each other and reconnect to your Bluetooth device. Remove the earphones from the charging case and enjoy using.

\*If the product fail to reconnect, please delete the pair record on your device, and follow step 2-3 again.



Please read the user manual for the Bluetooth device.



- ※ If you get in trouble on the first time pair. And KX-188tw are not found on your device. Please turn off and on Bluetooth function on your device again and search. If KX-188tw are found on your device, please delete the record and pair again.
- ※ The earphones will play confirmation tone "Disconnected" when earphones disconnect with Bluetooth device.

## Listening to Music

Please connect and pair with your Bluetooth device first.  
Use your Bluetooth device to start playback, referring to the device manual as necessary.

### When music playing

- Touch either left or right earphone . . . . . Pause

### When music playing

- Touch twice right earphone . . . . . Play the next track

### When music playing

- Touch twice left earphone . . . . . Play the previous track
- This function will be influenced by some APPs and play current song again. In this case, you can touch twice again after this operation.

### When music pause

- Touch either left or right earphone . . . . . Play



- ※ The volume control of devices are not available with the products
- ※ Selecting music, artist with the products are not available.
- ※ Touch twice left earphone may replay the current song due to different APPs.
- ※ Some control of devices may not available for music, video playback on some devices.

## Multi-Pairing Function

 
The product have multi-pairing function that can record 10 devices which pair before.

- ※ Please follow “**Connect and Pair via Bluetooth**” to pair with a new device. When switching to a new Bluetooth device, you may not be able to pair because the previously connected Bluetooth device cannot be able to disconnected. Please ensure disconnection status before pairing.

- ※ The product can record 10 devices. When the product need to record the eleventh device, it will forget the first record automatically.

### Record 10 devices at most

The product can record 10 smartphones; music player; Computer at most. It will connect and pair with them automatically from the second time.

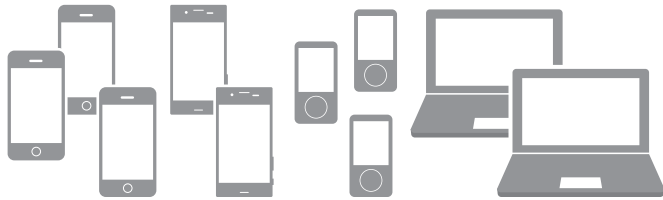

## Bluetooth Troubleshooting

### Problems about Pairing, no sound and the solution.

- Obstacles between product and the Bluetooth device, such as people, metal, walls and place the product and device closer together.
- Place the product and the Bluetooth device within 10m of each other.
- The product may be unable to pair if Bluetooth device connect to the product and Wi-Fi in the same time.
- Turn off Wi-Fi and pair the product with the Bluetooth device again.
- The product is unable to connect or control due to APPs and other products has connected your Bluetooth devices.
- Turn off the APPs and make sure your Bluetooth device has not connected with other product.

### Please follow these solutions as follow

- Delete the record on your Bluetooth devices, and follow step “**Connect and Pair via Bluetooth**” to pair again
- Turn off the product and Bluetooth device power and pair again.
- Recharge the product with charging case.

- ※ The product are not promised to pair with all the Bluetooth device.
- ※ If any par error affects Bluetooth device, KONG-X disclams responsibility.
- ※ To improve the appearances and packages, KONG-X has right to update without notification.
- ※ To ensure the quality, we will replace the defective products with new ones for manufacturing reason.



**Lucky Sound Technology Co.,Ltd**  
Room 313, Building No.1, Yifang Industrial Park (138 Park),  
Hongye North No.1 Road, Tangxia, Dongguan, Guangdong, China.  
TEL: 0769-8225 2556 Email: info@kingkong88.com  
Website: www.kong-x.com

Made in China with Japanese design

## Talking on the phone

※ Phone call controls explained as follow may not be available on some smartphones.

- Touch when receiving a call . . . . . Answer
- Touch when talking . . . . . End
- Touch and hold for 1 second . . . . . Reject



Control are available either L or R side.

 


※ The volume control of devices when talking are not available with the products

## Replacing the Eartips

The product includes silicone eartips in 3 sizes (XS, S, M).  
At the time of purchase, the M-size silicone eartips are attached.

- ※ To ensure the best sound quality, select the eartips that is best for you, and adjust the eartips inside your ears for a snug fit. Inappropriate eartips will lead you be difficult to hear bass sounds.

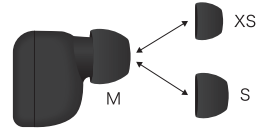

## Safety Precautions

To ensure safety, observe all warnings and cautions while using the product.

### ⚠ Caution

- ⚠ **Do not get wet**  
Avoid to electric leakage, crack, fire.

### ⚠ Caution

- ⚠ **Do not allow product being exposed to the sunlight.**  
Avoid to battery fluid leakage, crack and fire, especially in low power.

### ⚠ Warning

### ⚠ Do not touch fluid with bare hands

- ⚠ If fluid gets in your eyes, wash your eyes immediately. If your skin in contact with fluid, immediately wash the affected skin with water. If you experience eyes or skin irritation, consult doctor.

### ⚠ Charge only with the included USB Cable .

- ⚠ When charging, make sure to use the included USB charging cable to avoid malfunction or fire.

### ⚠ Do not use the product if it is abnormal.

- ⚠ Do not use the product from a device if the product begins to malfunction, producing smoke, odor, heat, unwanted noise or showing other signs of damage.

### ⚠ Do not disassemble, modify.

- ⚠ Do not disassemble, modify or attempt to repair the products to avoid electric shock, malfunction or fire.

### ⚠ Do not allow the product to get wet

- ⚠ Do not allow the product to get wet to avoid electric shock or malfunction

### ⚠ Do not use the product if you are cycling or driving.

- ⚠ Do not use the product to avoid the accidents when you are cycling or driving.

### ⚠ Do not use the products in loud volume in places where need to caution.

- ⚠ The product effectively shields external sound, so you may not ambient sound around you while hearing the product. Adjust the volume to a level where you can still hear background sound.

### ⚠ Discontinue use if skin irritation or feel sick.

- ⚠ If you begin to feel sick or skin irritation, please discontinue use immediately.

### ⚠ Do not use the product in place where has magnetic equipment.

- ⚠ Radio waves may affect cardiac pacemakers and medical electronic equipment.

## KX-188 Guarantee

This guarantee provides for free repair in accordance with the contents and items that have recorded. It is invalid if the necessary contents and items are out of this manual, so please read twice and keep a complete record in case of repairing.

1. If the product works abnormally under the manual guide. You can apply for after service to us or the store you buy it.
2. If the products are in the guarantee period, please contact the store or us for free repair.

### We will charge for repair in the condition as follow, even in the warranty period.

- (1) The misuse and malfunction of the products and the damage caused by repair in private.
- (2) The malfunction caused by disaster like fire disasters, earthquake, thunder etc.
- (3) The malfunction and damage caused abnormally used. (Vocational use for a long time)
- (4) This guarantee hasn't recorded the date of purchase, customer name, sales name, or the guarantee contents are obliterated.

\*This guarantee will not be issued again, please keep it properly.

\*The product is not promised to keep data which stored in your devices if there any damage occur. We disclaim all responsibility for the loss or damage of the data in this situation.

Guarantee Period	1 Year from Purchase Date(Y/M/D):
Customer	Name
	Address
	TEL :
Sales Store	

### Earnestly Promise

Your information in this guarantee will be only used for the repair. We will keep it confidential. We will not share to the third party without your agreement.