

180 Degree Convex Rear View Mirror Installation Instruction

We are striving to build an reliable brand of golf carts parts and accessories.

Hope this manual can assist you to easier install.

For more technical support, please reach us via

Website : **www.10101.com**

Email : sale_service@10101.com


Facebook : zhong zaiyang

Youtube : 10L0L

Contents	Qty	Installation Tools	Qty
Rear view mirror.....	1	Cross screwdriver.....	1
Mirror bracket.....	2	Drill bit, 9/64.....	1
Phillips head screw.....	4	Power drill	1
Knob.....	2	Measuring tape.....	1

(See figure 1)

Installation Tools

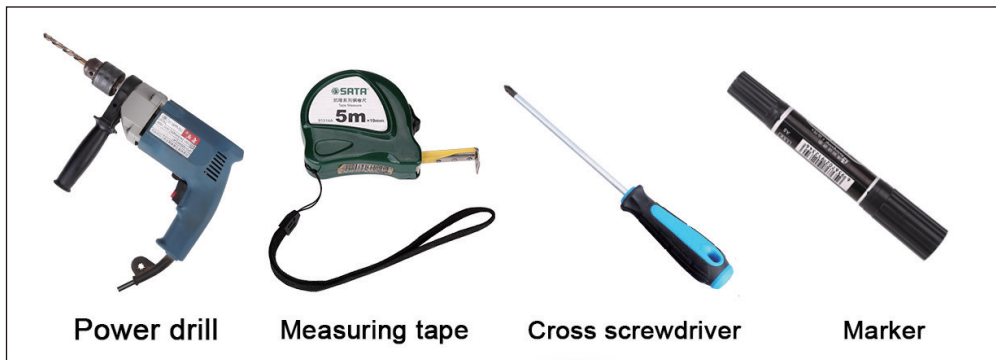

Installation Steps

1. Park the vehicle on level ground.
2. Turn the key to "OFF" position and remove it from the switch.
3. Make sure the parking brake is set.



4. Measure appropriate distances on the front strut to place mirror bracket in the middle.

5. Place brackets on strut at the measured locations and make a mark where the two holes in each bracket are.

(See figure 2)

6. Optionally use a 9/64 drill bit, and drill the four holes(only drill through the one side of the strut)

(See figure 3)

7. Screw down each bracket using supplied hardware, make sure that the 90 degree angle is towards the inside of the car. Do not over tighten.

(See figure 4)

8. Screw in the black knob on each side until mirror holds its desired position. Do not over tighten.

(See figure 5)

This completes the installation.

