

International Smart Production, Global Direct Supply

10. Make sure there is no angular deviation.

9. Make the screw drive in straight by

8. Make sure the holes are vertically


aligned.

hand.

(See figure 6)

(See figure 8)

(See figure 7)

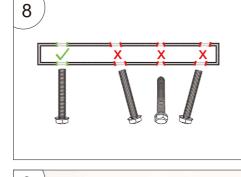

11. Mount armrest and hardware pack with a 3/8-inch (10mm) socket.

(See figure 9)



International Smart Production, Global Direct Supply (3)



5. Choose the short screw.

4. Align the back hole on the arm rests

with the U-shaped bracket hole.

See figure 3 (See figure 3)

See figure 2

(See figure 2)

6. Use short screws to fix the U-shaped bracket.

See figure 4 (See figure 4)

7. Tighten it as shown.

See figure 5 (See figure 5)





International Smart Production, Global Direct Supply



13. As shown in the picture.

(See figure 10)

12. Use the wrench tighten the U-shaped bracket.

(See figure 11)

This all completes your installation.



4. Use scissors to cut the templates along the dotted line marked in the manual.

(See figure 2)

side to side on bar).

(See figure 3)

5. Place template on rear seat kit side bars(Make sure the templates are centred

6. Drill holes with a 5/16" drill bit on the

(See figure 4)

marked spot.

7. Make sure the drill bit is perpendicular to the bar.

(See figure 5)



International Smart Production, Global Direct Supply

Please search 10L0L

Arm Rest Set With Cup Holder Installation Instruction

We are striving to build the NO. 1 brand of online shopping. We hope all our customers can install the accessories by yourself. For more technical support

Or add Facebook ID: zhong zaiyang Or email us:purchasesupport@qq.com Contents

Contents	Qty
Arm Rest Set With Cup Holder	2
Manual	1
Hardware kit	
U-shaped bracket	4
Short screws	4
Long screws	4
Non-slip nuts	4
Flat washers	4

Qty
1
1
1
1

Tools needed list See figure 1 3/8 inch(10mm) Socket 3/8 inch(10mm) Wrench Cross Screwdriver Torque Wrench

Detailed installation steps

- 1. Park the vehicle on level ground.
- 2. Turn the key to "OFF" position and remove it from the switch.
- 3. Make sure the parking brake is set.



International Smart Production, Global Direct Supply (4)

8. Install the armrests on the rear seat

(See figure 6)

frame.

9. Adjust to the suitable position.

(See figure 7)

10. Choose long screws and washers.

(See figure 8)

11 . Make the nut facing out.

(See figure 9)

International Smart Production, Global Direct Supply