



Golf Cart OBC Bypass Wire for CLUB CAR Precedent Installation Diagram

We are striving to build a reliable brand of golf carts parts and accessories.

Hope this manual can assist you to easier install.

For more technical support, please reach us via


Website : www.10101.com

Email : sale_service@10101.com

Facebook : zhong zaiyang

Youtube : 10L0L

Assembly Diagram

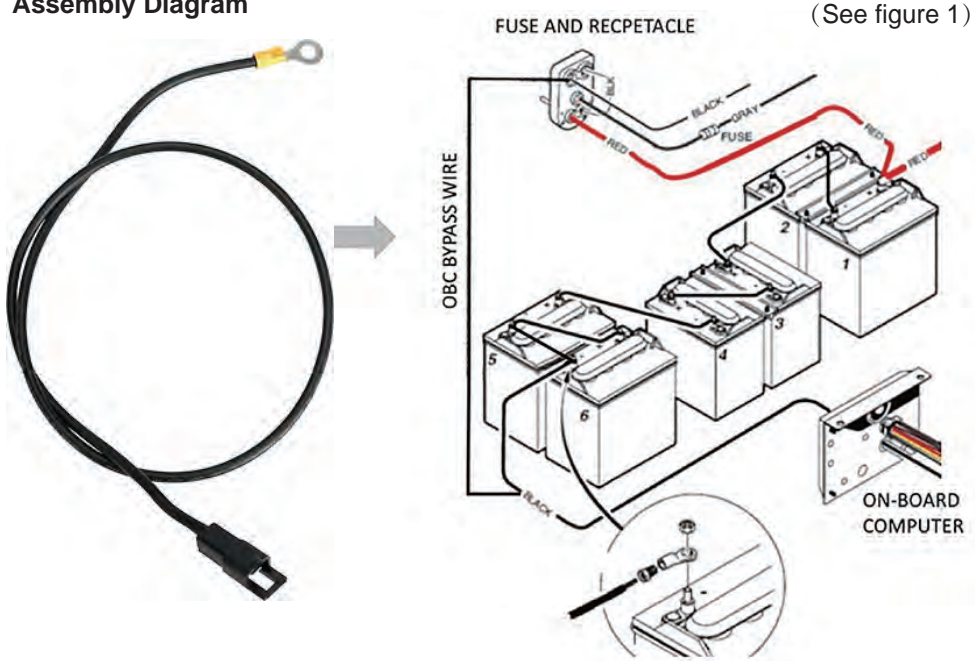

Cart Year	Model	Modification Required
1995-2010	48V Club Car DS	Requires OBC bypass modification
2004-2014	48V Club Car Precedent	Requires OBC bypass modification
2015-Present	48V Club Car Precedent	


Installation Tools



Installation Steps

1. Unscrew the screws of the electric control board protection box.

See figure 1

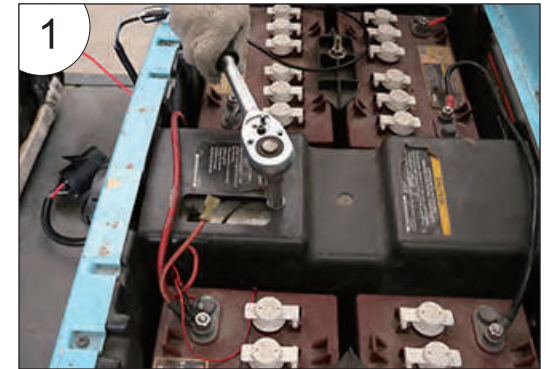


2. Remove the box.

See figure 2



3. Find the cable that originally charged the computer board and unplug it.

See figure 3

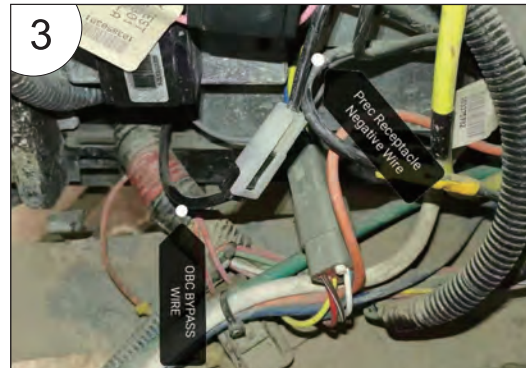

4. Replace and insert new OBC bypass wire.

See figure 4



5. The unplugged charging cable is no longer in use, wrap it with insulating tape.

See figure 5



6. As shown.

See figure 6



7. Connect the OBC bypass wire to the negative terminal of the battery.

See figure 7



8. Installation complete.

See figure 8

